heater & fan

SPT®

SH-1507

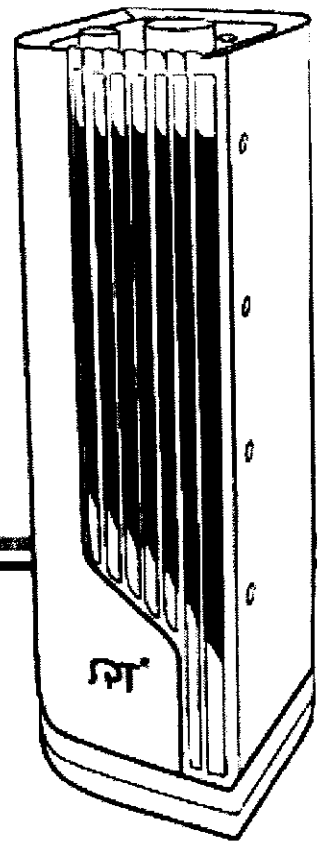

heater & fan

CERAMIC HEATER

OPERATING MANUAL

READ AND SAVE THESE INSTRUCTIONS

This heater is for residential use only.
It's not intended to be used in commercial or industrial settings.

MODEL SH-1507

OPERATION KNOB

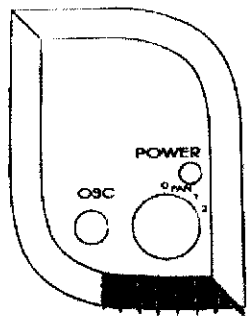

- OSC. = OSCILLATION
- 0 = OFF
- FAN = Fan-Only
- 1 = LOW
- 2 = HIGH

TOP

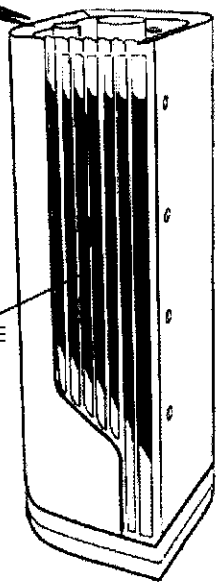

BACK

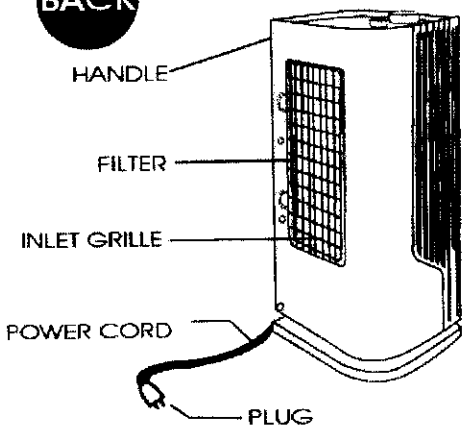

BOTTOM

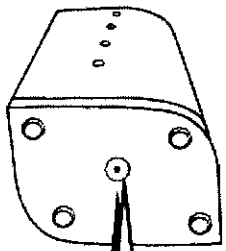

TIP OVER SWITCH

It will activate should the unit be tipped over.

OPEATION

● ROOM 20° C (68°F)

POWER	HEAT
	120V 60Hz
High	1200W
Low	600W

1.Be sure that the plug fits tightly into outlet.

2.Move the Power Knob to the desired heat setting.
For Fan-Only Operation,without any heat output,turn the Power Knob to the Fan Setting.

3.Oscillation Function:
This function will work in any HEAT or FAN setting. Pressing the Oscillation button will alow the heater to circulate air more effectively by sweeping from side to side.

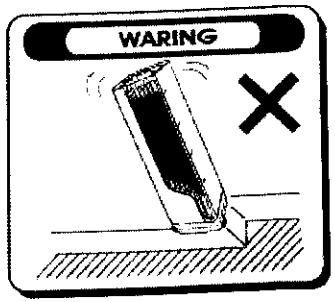

4.To disconnect Heater, turn Power Knob to the "OFF" position (0), then remove plug from outlet.

5.Always situate your Heater on a solid and steady surface, this unit incorporates a safety switch which will activate should the unit be tipped over.

6.A thermal overload protector is built in to the heater to prevent overheating.If an over heat temperature is reached,the heater will be automatically shut off.Please turn the power off.Unplug the heater and wait 10 minutes for the heater to cool down.After the heater has cooled down,plug the heater into the outlet and follow the Operation Instruction described in this manual.

SPECIFICATION

MODEL	SH-1507
VOLTAGE	120V
Hertz	60Hz
Power consumption	1200W

HINTS AND TIPS

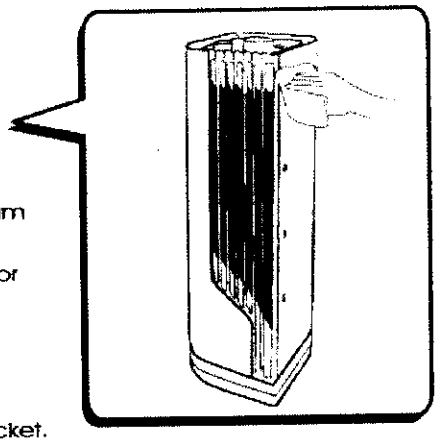

1.BODY

⊙Clean only with a damp cloth,do not pour water directly onto the unit.

⊙Clean the filter once a week by removing and cleaning with a vacuum cleaner.

⊙Unplug the unit if it is not to be used for a long time.

2.Cleaning the filter

⊙Turn off the unit at the heater control knob and unpulg from the power socket.

⊙Open the filter cover by pushing down on the two filter cover retaining clips and pulling the filter cover downwards.

⊙Remove the PP filter from the back of the filter cover and clean with a vacuum cleaner.

⊙Replace the filter and close the filter cover. Make sure the cover is secured by both clips.

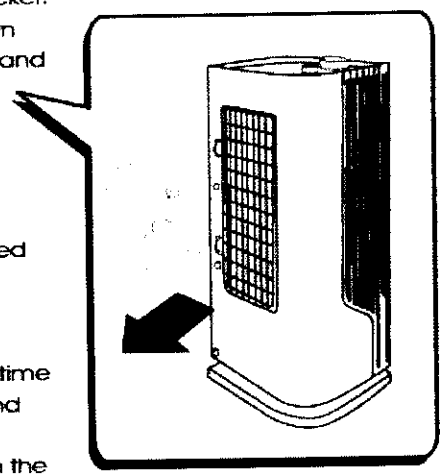

3.Storage

⊙If the unit is not to be used for some time please unplug from power source and allow unit to cool down.
Store the heater with this instruction in the original carton in a cool,dry place.

SAFETY

Connecting Power

This appliance is designed to operate on AC 120V, 60Hz supply only. Connecting to other power sources may damage the unit.
Before switching ON, please make sure the voltage of your electricity supply is the same as that indicated on the rating plate.

If the supply cord is damaged, it must be replaced by the manufacturer or a similarly qualified person in order to avoid a hazard.
Other precautions

⊙Always situate your heater on a solid and steady surface.
This unit incorporates a safety switch which will activate should the unit be tipped over.

WARNING: Do not cover or place anything on or near the heater, which will block the inlets and outlets. Ensure that nothing blocks the airflow to and from the air inlet, air outlet.
Route the power cable where it will not be walked on, crushed, chafed or cut.

⊙Do not push any object into any opening and ventilation slots.

⊙Do not use the heater near water (for example: a bath, sink, or pool) in a wet basement or in any damp environment.

⊙Do not operate if there is any foreign body or liquid inside the machin
If this happens, immediately Switch off unit, disconnect the plug and call a qualified service engineer.

⊙Never remove any covers.

⊙Please turn the unit off and unplug before moving.

WARNING: In order to avoid overheating, do not cover heater.

⊙The heater must not be located immediately below a socket outlet.

CUSTOMER ASSISTANCE LINE

If you experience a problem, please see the warranty for information. Please DO NOT attempt to repair this unit yourself. Doing so, will void your warranty and could cause damage to the unit or personal injury to yourself. If you have any questions concerning this appliance, please call : 909-468-5288

YOUR GUARANTEE

If this product is found to be faulty as a result of faulty materials or workmanship within one year from date purchase, it will be repaired free of charge.

This guarantee is subject to the following terms:

- Sunpentown must be notified of the fault.
- Proof of purchase must be presented to Sunpentown's nominated representative.
- The warranty will be void if the poduct in modified, misused or repaired by an unauthorized person.
- The warranty after repair will not be extended beyond the original one-year period.
- All replacement parts will be new or reconditioned. Parts, which are replaced, become the property of Sunpentown.
- The warranty applies for the use of the product in the USA only.

What is NOT COVERED:

- Warranty does not include freight charges.
- Incidental or consequential damage caused by possible defects with this product.
- Damage to product caused by improper power supply voltage, accident, fire, floods or acts of nature.
- Failure of product resulting from unauthorized modifications to the product.
- Improper installation or failure to perform the necessary maintenance.

This GUARANTEE is in addition to your Statutory Rights

SUNPENTOWN INTERNATIONAL INC.
21415 Baker Parkway, City of Industry, CA 91789-5236
909-468-5288/Fax: 909+468+5279
service@sunpentown.com